

**INSTALLER CHECK APPROPRIATE BOX AND PLACE LABEL ON OUTSIDE ACCESS PANEL**

<b>MODEL NO:</b> WKF0502B	<b>VOLTS:</b>	208 1P	230 1P
<b>TAG:</b> EHK05AKB1	<b>HTR WATTS:</b>	3750	4600
	<b>HTR AMPS:</b>	18.0	20.0

<b>EQUIPMENT MODEL NO</b>	<b>MCA</b>	<b>MOCP</b>	<b>MCA</b>	<b>MOCP</b>
EBP1800-3600, A/B WAH(M,T) 18-36, FXM4X 18-36	25.9	30	28.4	30
EBP4200-6000, A/B WAH(M,T) 42-60, FXM4X 42-60	31.0	35	33.5	35
EBX/V2400A-3600A, FCM4X 24, 36, WAP(M,T) 18-36	25.9	30	28.4	30
EBX/V4200A-6000A, FCM4X 48, 60, WAP(M,T) 42-60	31.0	35	33.5	35
FEM,FSU,FSM,FVM (2,4) 1800A - 3600A	25.9	30	28.4	30
FEM,FSU,FSM,FVM (2,4) 4200A - 6000A	31.0	35	33.5	35

