

**INSTALLER CHECK APPROPRIATE BOX AND PLACE LABEL ON OUTSIDE ACCESS PANEL**

|  |                   |        |        |
|--|-------------------|--------|--------|
| <b>MODEL NO:</b> WRX0502(B/X)                    | <b>VOLTS:</b>     | 208-1P | 240-1P |
| <b>TAG:</b> RXBH17(24)A-05J / RXBH1724A(B)(C)05J | <b>HTR WATTS:</b> | 3600   | 4800   |
| PAGE 2 OF 3                                      | <b>HTR AMPS:</b>  | 17.3   | 20.0   |

| <b>EQUIPMENT MODEL NO</b>                 | <b>MCA</b> | <b>MOCP</b> | <b>MCA</b> | <b>MOCP</b> |
|---|------------|-------------|------------|-------------|
| RH1T 2417 / RH2T 2421                     | 24         | 25          | 27         | 30          |
| RH1T 3617                                 | 26         | 30          | 29         | 30          |
| RH1T 3621,4821 / RH2T 3621                | 27         | 30          | 30         | 30          |
| RH1T 4824, 6024                           | 28         | 30          | 31         | 35          |
| RH1P 1817,2417                            | 24         | 25          | 28         | 30          |
| RH1P 3017,3617,3621                       | 25         | 25          | 29         | 30          |
| RH1P 4221,4821,4824,6024                  | 29         | 30          | 32         | 35          |
| RH1V 2417                                 | 26         | 30          | 29         | 30          |
| RH1V 3617,3621,4821,6021 / RHMV 2421 HEAC | 27         | 30          | 31         | 35          |
| RH1V 4824,6024                            | 31         | 35          | 34         | 35          |
| RH2V 2421 / RHMV 2421 MEAC                | 24         | 25          | 28         | 30          |
| RH2V 3624,4824                            | 28         | 30          | 32         | 35          |
| RHMV 3617                                 | 26         | 30          | 30         | 30          |
| RHMV 6021,6024                            | 28         | 30          | 32         | 35          |

