

**INSTALLER CHECK APPROPRIATE BOX AND PLACE LABEL ON OUTSIDE ACCESS PANEL**

<b>MODEL NO:</b> WRX1802S(B)	<b>VOLTS:</b>	208-1P	240-1P
<b>TAG:</b> RXBH17,24A-18J	<b>HTR WATTS:</b>	12600	16800
	<b>HTR AMPS:</b>	60.5	70.0

<b>EQUIPMENT MODEL NO</b>	<b>MCA</b>	<b>MOCP</b>	<b>MCA</b>	<b>MOCP</b>
SINGLE CIRCUIT				
UHLA/SA/LL/SL42-60,(21/24)	84	90	95	100
RHLA/SA/LL/SL42-60,(21/24)	84	90	95	100
RHMV 2421HEAC	83	90	94	100
RHMV 3617SEAC	82	90	93	100
RHMV 6021SEAC	84	90	95	100
DUAL CIRCUIT				
UHLA/SA/LL/SL42-60,(21/24)	45/46	50/50	50/51	50/60
RHLA/SA/LL/SL42-60,(21/24)	45/46	50/50	50/51	50/60
RHMV 2421HEAC	32-52	35-60	35-60	35-60
RHMV 3617SEAC	30-52	30-60	34-60	35-60
RHMV 6021SEAC	32-52	35-60	36-60	40-60

