

**INSTALLER CHECK APPROPRIATE BOX AND PLACE LABEL ON OUTSIDE ACCESS PANEL**

<b>MODEL NO:</b> WRX1002(B/X)	<b>VOLTS:</b>	208-1P	240-1P
<b>TAG:</b> RXBH17,24A-10J / RXBH-1724A(B)(C)10J	<b>HTR WATTS:</b>	7200	9600
Page 1 of 2	<b>HTR AMPS:</b>	34.6	40.0

<b>EQUIPMENT MODEL NO</b>	<b>MCA</b>	<b>MOCP</b>	<b>MCA</b>	<b>MOCP</b>
RHLA/RHLL/UHLA/UHLL 18-60(17,21,24)	49	50	56	60
RHSA/RHSL/UHSA/UHSL 18-60(17,21,24)	49	50	55	60
RHPN 24-60(21,24)	50	50	57	60
RHKA/RHKL 18-60(17,21,24)	49	50	56	60
RHPL 24-28(21,24)	50	50	57	60
HFE 18-42(17,21)	47	50	54	60
HFE 48-60(21,24)	51	60	53	60
RH1T 2417 / RH2T 2421	46	50	52	60
RH1T 3617	47	50	54	60
RH1T 3621,4821 / RH2T 3621	49	50	55	60
RH1T 4824,6024 / RH2T 4824,6024	49	50	56	60
RH1P 1817,2417	46	50	53	60
RH1P 3017,3617,3621	47	50	54	60
RH1P 4221,4821,4824,6024	50	50	57	60

