 




# WRX — 2502B

4-PIN  
PLUG

STEP # 1  
STEP # 2





\*\*\*\*  
FIELD CONNECTION  
240VAC  
1 Ø

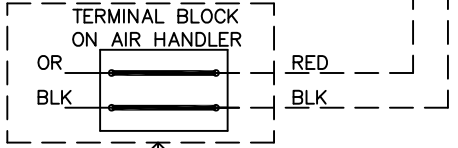
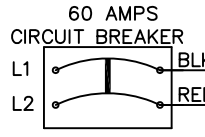


IMPORTANT: WIRE CONNECTION TO TERMINAL BLOCK ON AIRHANDLER MUST BE CONNECTED AS SHOWN.

 \*\*\*\*  
FIELD CONNECTION  
240VAC  
1 Ø

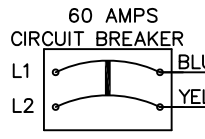

\*\*\*\*  
FIELD CONNECTION  
240VAC  
1 Ø

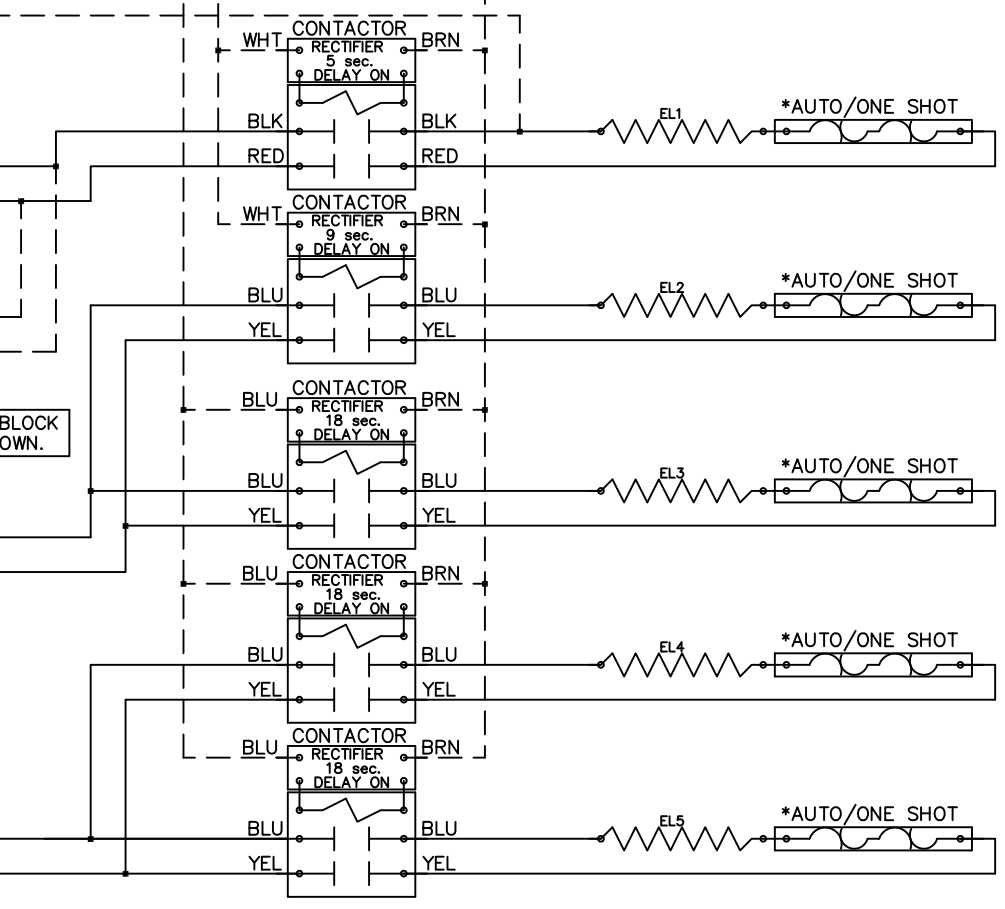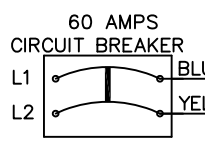

Model	<u>WRX-2502B</u>
Serial #	<u>                    </u>
Tag -	<u>                    </u>
Kilowatts	<u>24.00</u>
Volts-Ph-Hz	<u>240/1/60</u>
Control Volts	<u>24.0</u>
Steps	<u>2</u>
Heater Amps	<u>20.0/40.0/40.0</u>
Circuit Breakers	<u>60/60/60</u>

NOTE :  
 \* Replace auto/one-shot with L150F-333F  
 \*\*\* Relays utilize 22-28VDC coils with AC to DC rectifiers.. Do not use relay without rectifier. 24VAC, Class 2 power source must not exceed 26.4 VAC under any primary input voltage condition per UL/NEC.  
 \*\*\*\* Power supply wiring per NEC & Local Codes. Suitable for at least 75°C.  
 Use copper conductor wiring only.

Control Wiring                          
 Power Wiring                           
 Field Wiring