


HORIZONTAL MOUNTING POSITIONS


P1

AIR FLOW RIGHT
PANEL LEFT

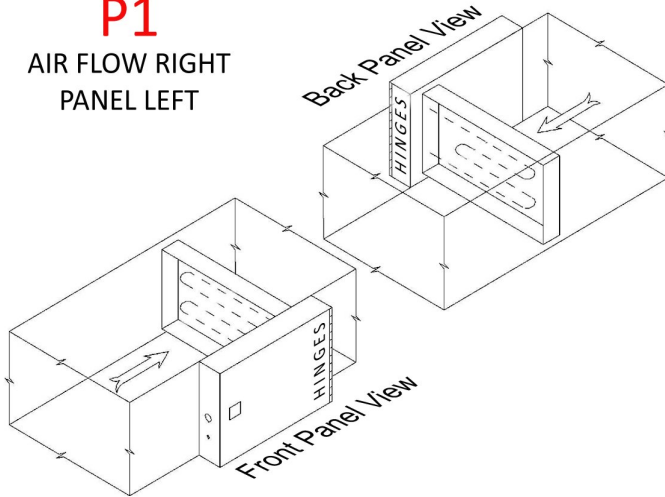


P2

AIR FLOW LEFT
PANEL LEFT

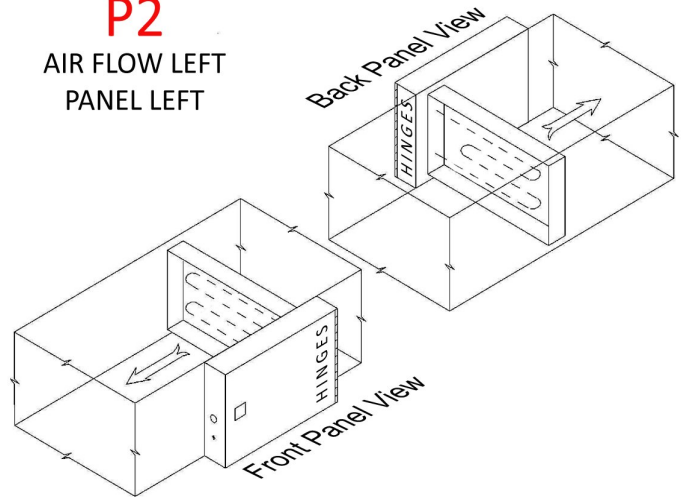


P3

AIR FLOW RIGHT
PANEL RIGHT

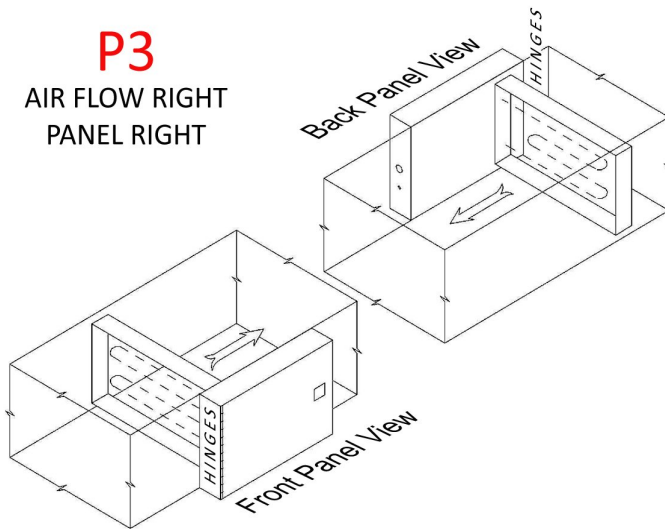


P4

AIR FLOW LEFT
PANEL RIGHT

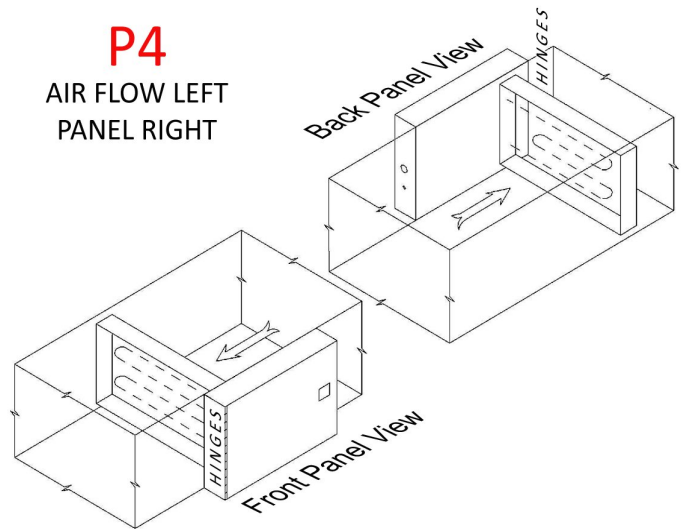


P9

BOTTOM MOUNT

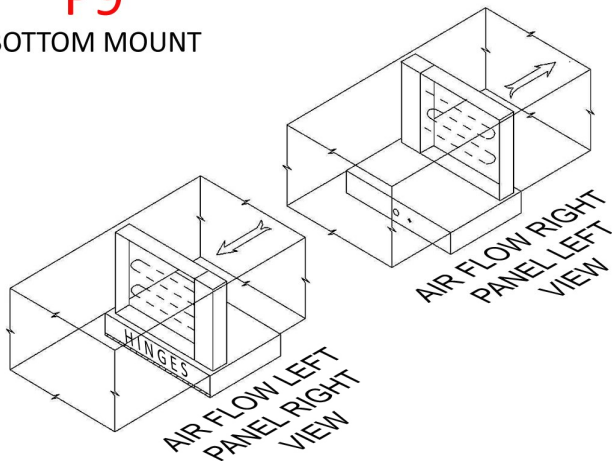

P10

BOTTOM MOUNT

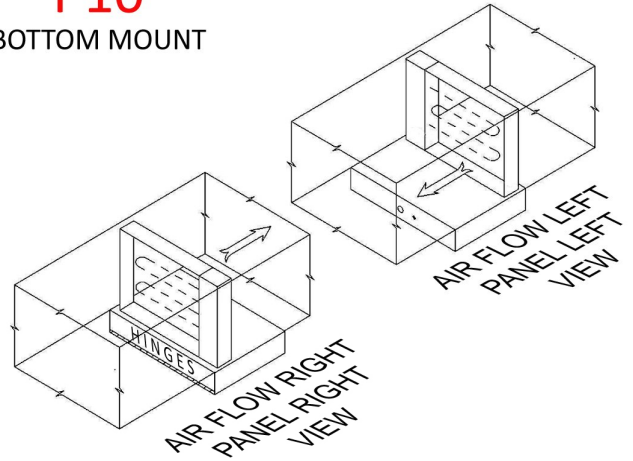


Warren Technology

2050 West 73 Street, Hialeah, Florida 33016 • Telephone (305) 556-6933 • Fax (305) 557-6157
Website: www.warrenhvac.com E-Mail: warren@warrenhvac.com

VERTICAL MOUNTING POSITIONS


P5

AIR FLOW DOWN
PANEL DOWN

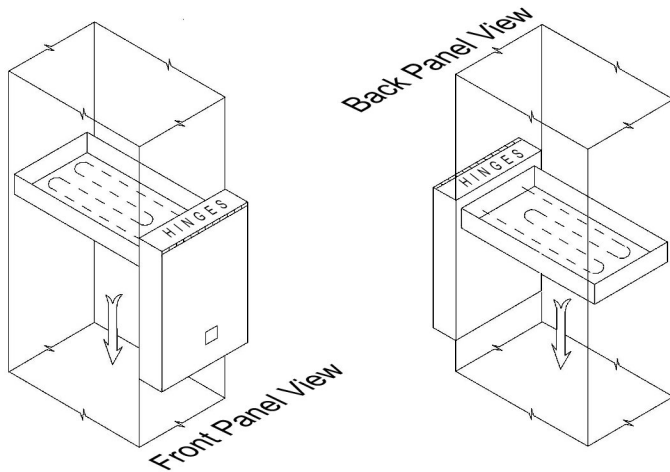


P6

AIR FLOW UP
PANEL DOWN

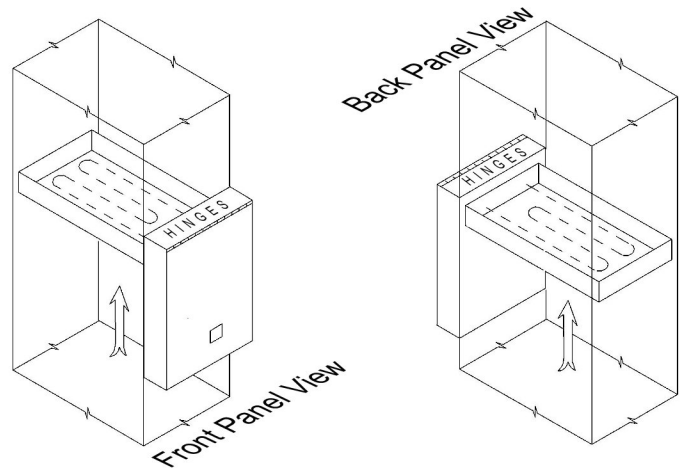


P7

AIR FLOW DOWN
PANEL UP

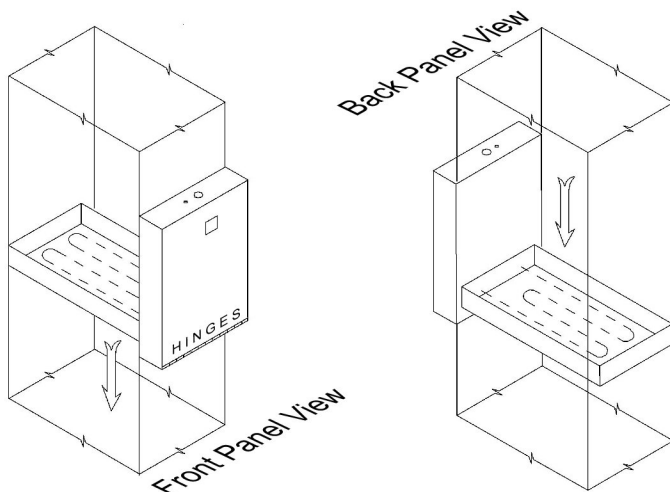

P8

AIR FLOW UP
PANEL UP

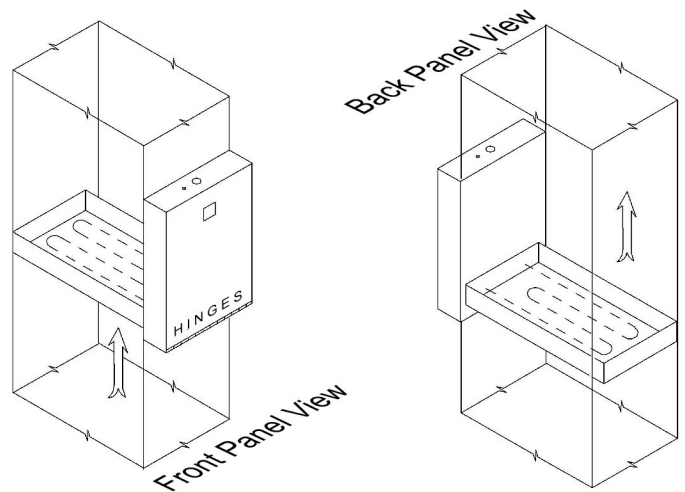

Warren Technology

2050 West 73 Street, Hialeah, Florida 33016 • Telephone (305) 556-6933 • Fax (305) 557-6157
Website: www.warrenhvac.com E-Mail: warren@warrenhvac.com